

Weizel Security 1-800-308-3627

845-R04 SR Break Away Shower Curtain **Technical Data Sheet**

Sheet 1 of 2: Fabric Details

Fabric Details:

Both ShowerShield and Sure-Chek fabrics meet NFPA 701 flame resistance standards, and are supplied with 1-1/2" wide velcro loop tape sewn to the fabric along the top hem. Optional clear vinyl panels for bottoms or tops are available



is 100% polyester, intrinsically flame resistant, Anti-microbial, and is formulated to resist bacterial growth



is a flame resistant vinyl fabric with filament reinforcement. It is stain resistant, antistatic, odor resistant and has a built in antimicrobial agent



Optional Nylon Mesh: #50, 1/2" holes. Standard mesh height is 20", other heights available

White

Bone

Blue

Rose


Green

Peach











Weizel Security 1-800-308-3627

845-R04 SR Break Away Shower Curtain Technical Data Sheet 2 of 2

Sheet 2 of 2: Trackset & Installation Details

Trackset Details:

Both the ceiling hung and the wall hung tracksets are made of extruded 6063-T5 aluminum with satin anodized finish and are supplied with 3 Velcro Safety Tabs per foot. For ligature resistance, we highly recommend the ceiling mounted trackset over the wall mounted trackset. If the wall mounted trackset is selected for a behavioral health application, at least one end must be tight to the adjacent sidewall, and sealed with construction adhesive.



Ceiling Hung Trackset

Section Size: 1-7/8" x 9/16" x .062" Used for ceiling, soffit, or inside window frame mounting. Available in straight lengths or with 12" radius bends.



Wall Hung Trackset

Section Size: 1-3/16" x 1-5/16" x .062" For wall mounted applications where the ceiling mounted trackset would be unmountable. Straight lengths only.




Velcro Safety Tab


Dimensions: 4" x 3/4"

The amount of resistance provided before the curtain "breaks away" from the tab is determined by the number of tabs installed in the track.

Installation:

Mounting To Plaster or Gypsum Board Ceiling

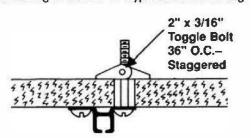

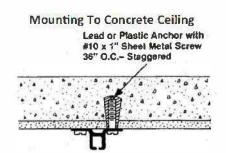

Mounting Through Suspended Ceiling To Furring Above

Mounting To Concrete Wall

